

Přehled tvarů frézování



Tvar 86



Tvar 90N



Tvar 91N



Tvar 95N



Tvar 96B



Tvar 96H



Tvar 97



Tvar 98



Tvar 99A



Tvar FB



Tvar I2



Tvar L00



Tvar L0A



Tvar E4N | I4N



Tvar E5N | I5N



Tvar E5K | I5K



Tvar E6N | I6N



Tvar E7N | I7N



Tvar E8N | I8N



Tvar E9N | I9N



Tvar E11 | I11



Tvar E20 | I20



Tvar E21 | I21



Tvar E22 | I22



Tvar E23 | I23



Tvar E31 | I31



Tvar E32 | I32